




IR TRANSMITTER

- * IR control for PTZ, DVR, and remote switch
- * IR emission distance: straight line is 10m; transmit at left and right 22.5° is 8m
- * Control up to 255 PTZ and remote switch / Control up to 255 DVR
- * Enabling different ID
- * Current consumption: AAA size battery × 2

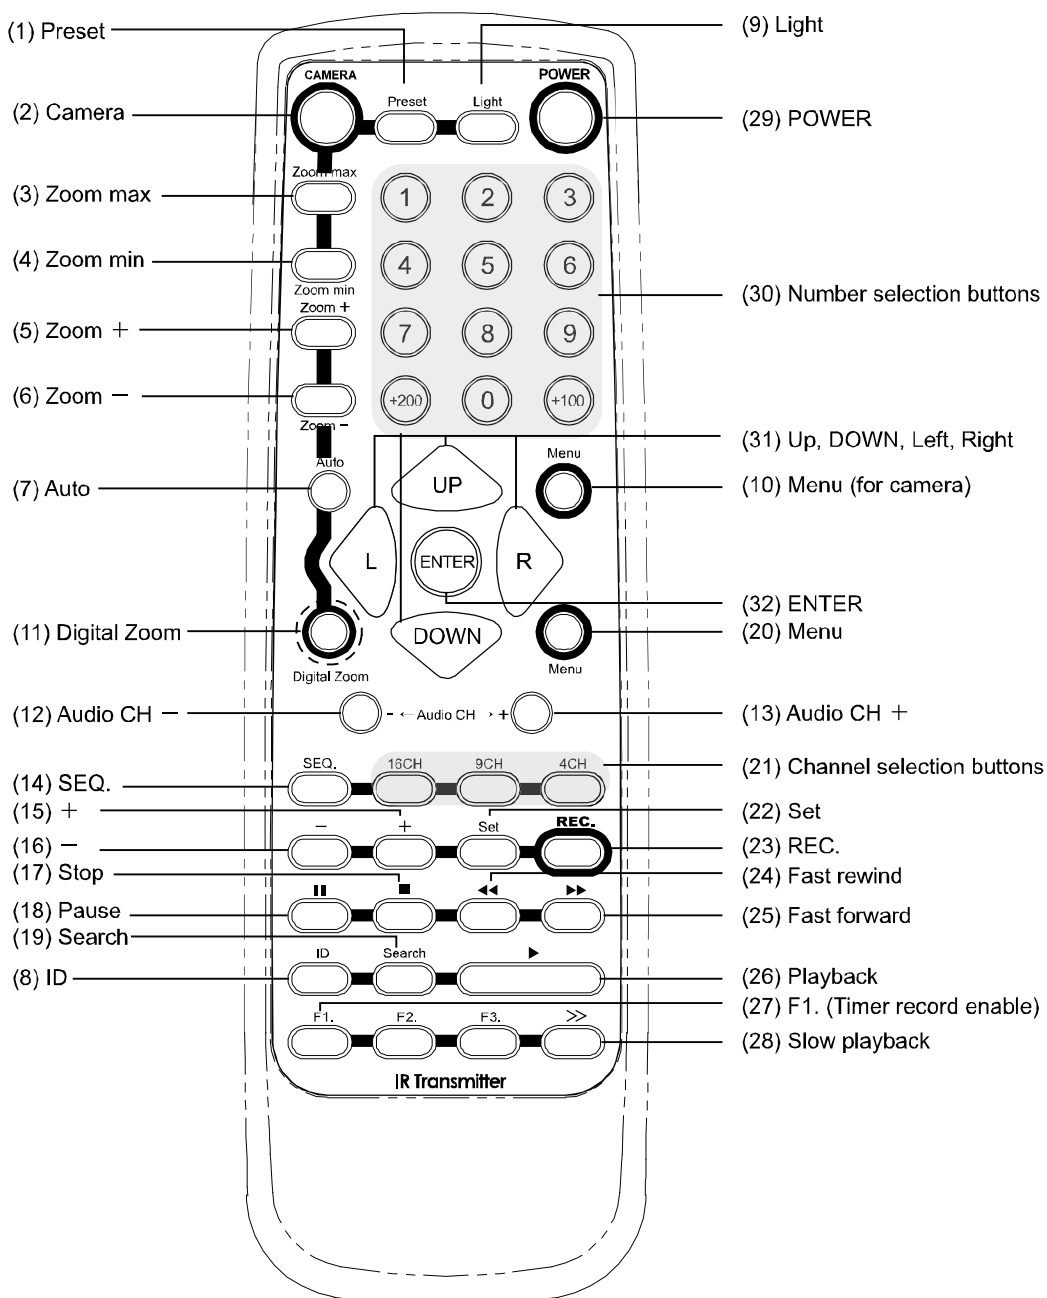

- * CAMERA control buttons: Button (1) to (10). (button (9) is used for control the switch)
- * DVR control buttons: Button (11) to (28).
- * OTHER control buttons – Support controlling both CAMERA & DVR. Button (29) to (32).
- * F2 and F3 are dummy buttons.

CAMERA

1) Preset:

Press this button to set the preset points of the PTZ.

Use the “◀” “▶” to move the cursor.

Use the “ENTER” button to enter the submenu, and confirm the selection.


Use the “MENU” button to enter the menu mode, confirm the change and exit the menu mode.

* ADD: add the preset points,
maximum is 16 preset points.

* INS: to insert the camera preset.

* EDIT: to edit the preset points

* DEL: delete the preset points

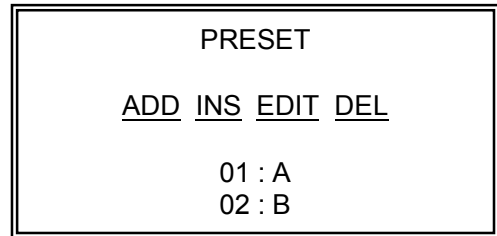

2) Camera:

In the PTZ control mode, press the “CAMERA” button + “ID number of the PTZ”, and then press “ENTER” to select and control the PTZ camera.

3) Zoom max:

Press the “Zoom max” button, then the image of the PTZ will zoom in to a maximum size.

4) Zoom min:

Press the “Zoom min” button, then the image of the PTZ will zoom out to a minimum size.

5) Zoom + :



Press the “Zoom +” button,
to change the optical zoom in ratio of the PTZ.

6) Zoom — :

Press the “Zoom —” button,
to change the optical zoom out ratio of the PTZ.

7) Auto :

Press the “Auto” button, to enter the auto mode.

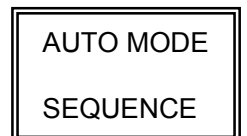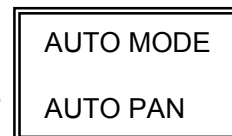

Use “▲” “▼” to select between “Auto Pan” mode and “Sequence” mode,
and press “Menu” button to confirm the selection.

* In the “Auto Pan” mode, PTZ will pan automatically.

* In the “Sequence” mode, PTZ will pan according to the preset point settings.

8) ID :

Press the “ID” button, the “CAMERA ID” will be shown the screen.

 
9) Light :

Press the “Light” button, to turn on / turn off the power of remote switch.

10) Menu :













Press the “Menu” button, to enter the main menu of the CAMERA.

DVR

- 11) Digital Zoom :
Press the “Digital Zoom” button to enlarge the picture of selected channel (2X).
Press the “Digital Zoom” button again to exit from the zoom picture.
- 12) Audio CH – :
Press the “Audio CH – ” button to select audio channel and play mode (live or playback).
- 13) Audio CH + :
Press the “Audio CH – ” button to select audio channel and play mode (live or playback).
- 14) SEQ:
Press the “SEQ” button, to activate / inactivate the CALL MONITOR function.
When this function is activate, the screen will display each channel in sequence.
- 15) + :
Press the “+” button, to change the settings in the menu.
- 16) – :
Press the “–” button, to change the settings in the menu.
- 17) ■ :
Press the “■ ” button, to stop the playback files.
- 18) ▬ :
Press the “▬ ” button, to pause the playback files.
- 19) SEARCH :
Press the “SEARCH” button, to enter the search mode.
Please refer to “[Section 6.1 Search](#)” for detailed information.
- 20) Menu :
Press the “Menu” button, to enter the main menu of the DVS.
- 21) Channel selection buttons :
Press  buttons, to select the 16 / 9 / 4 channel display.
- 22) Set:
Press the “Set” button, to swap channel display position.
For example, if you want to swap “01” channel with “16” channel.
→ Move the cursor to the “01” channel and press “Set” button.
→ Use “+” or “–” to select the “16” channel, and press “ENTER” button.
→ Press “Menu” button to exit the “Set” mode.

- 23) Rec :
Press the “Rec” button to start the recording function of 1-16 channels.
- 24) Fast rewind :
Under playback mode, press the “◀◀” button to fast rewind.
- 25) Fast forward :
Under playback mode, press the “▶▶” button to fast forward.
- 26) Play :
Press the “▶” button to start playing the latest recorded file.
- 27) F1. :
Press the “ F1 ” button, to activate the timer recording function.
- 28) Slow playback :
Press “>>>” button to get 1/4X speed playback and press twice to get 1/8X speed, three times to get 1/16X speed, and four times to get 1/32X speed.

OTHER

- 29) POWER :
Press the “POWER” button, to turn off the power of DVS.
(If the DVS is under recording, then you must stop recording first.)
- 30) Number selections buttons :
Press the “    “ buttons, to select numbers
/ to select the channel number
- | | | |
|---|---|---|
|  |  |  |
|  |  |  |
|  |  |  |
- 31) UP, DOWN, LEFT, RIGHT:
Press the “UP”, “DOWN”, “LEFT”, “RIGHT” button, to move the cursor / to control the PTZ camera.
- 32) ENTER :
Press the “ENTER” button, to enter a submenu mode / to confirm the selection.